



We want to be with you every step of the way. So much so, that we've created an exclusive Spotify playlist for you and your renovation.
Let the rhythm play!

**IMAGINE IT.
CREATE IT.
ENJOY IT.**

STEP-BY-STEP
IMPLEMENTATION GUIDE FOR
KITCHENS, BATHROOMS AND SHOWERS



If Gaudi had this guide, the Sagrada Familia would have been finished a looonng time ago.



RENOVATION
WITHOUT
BUILDING WORK

You've been picturing it for a while. And now it's time to get creative!

Don't worry because this kit contains eveeeerything you need to do the renovation totally by yourself, the one you've been dreaming of for so long.

We could tell you that you'll be enjoying that new nook in your home "in the blink of an eye" or "in no time at all" , but the truth is, with Smartcret, we don't even have to mention it.

Just enjoy the ride and the joy of the finished product . We'll take care of the rest.

We'll guide you through the step-by-step process for your renovation.

Let's get started!

www.smartcret.com

01

TIME TO CLEAN UP!



For the finished product to be absolutely beautiful and perfect, it's super important that the surface be free of dust and grease.

So, let's cleeeean.

Once it's spick and span, take the masking tape and outline the surface where you'll be applying the microcement.

***Important:** If the substrate is not stable and/or shows cracks or chipping, repair it. If there is excessive damp or mildew in the substrate, make it damp-free.



02

CHOOSE BETWEEN

02A

Absorbent surfaces
(Drywall, plaster, etc.)

02B

Non-absorbent surfaces
(Marble, terrazzo, tiles, etc.)

03

THE HEART OF THE RENOVATION



Do you remember the dance from the "Macarena"?

Stir the **Smart Base** well to the rhythm of the song, with the help of the spatula. Dip the **Smart Roller** in the **Smart Base** and spread the microcement super thinly, less than 1mm! Apply the **Smart Base** first vertically and then horizontally. Then, smooth it out with the **polycarbonate trowel** in a 45° angle, using arcing motions in all possible directions. Repeat this process until the surface is smooth.

Apply **2 layers** with the **Smart Roller** and the **polycarbonate trowel** and remove the masking tape in between layers.

Let it dry for **six hours** in between each layer for it to dry properly.

Sand each layer with **40-grit sandpaper**. You'll see the sandpaper grain on the Velcro. Just attach it to the sanding glove and start sanding, sanding, and sanding.

*If you have purchased our toolkit, you will find the sandpaper there.)



04

LIKE PUDDING, SHALL WE HAVE SECONDS?



Dance again and mix **Smart Liso** with the spatula!

Place the tape back on and go for the **Smart Liso!** Follow the same process and spread the **Smart Liso** with the **Smart Roller** and **polycarbonate trowel*** in ultra thin layers (less than 0.5mm). Apply 2 layers in total.

Remove the tape between layers and **let each layer dry for 6 hours**.

Sand after each layer with **220-grit sandpaper**.

Wait **24 hours** to start step 05.

*To avoid the burnt effect, do not use a steel/aluminium trowel or pass over the Smart Liso excessively with the trowel.



05

PROTECTION ABOVE ALL



You've chosen the finish you wanted most (matte or satin), but also so much more: **Smart Varnish** will protect the surfaces to make them look perfect, but to give it an extra boost for those high-traffic and wet areas, we've got to add the **Smart Booster!**

Add the **Smart Booster** to the **Smart Varnish** container. Gently shake the container manually for a few minutes. Let the mixture sit for 5-10 minutes.

Once the **Smart Varnish** mixture is ready, apply the first coat. The mixture has a **shelf life of 24 hours**, so you can use it for the **second and third coats**. Each coat should **dry for 4 hours**.

We recommend sanding the first and second layers with **400-grit sandpaper**.

***Important:** We recommend waiting for 7 days to allow the varnish to reach its peak performance.

****All sandpaper grits mentioned in this step-by-step guide are for manual sanding (not machine sanding).**

Well bonded surfaces

It's time to prepare the surface to make sure that the microcement adheres properly. And for that, we have **Smart Primer ABS**.

Take the roller and the handle, attach them, and apply **one layer of Smart Primer ABS** (pour the product into a tray for added convenience).

Wait 30 minutes for it to dry, and clean the roller immediately to prolong its lifespan.

Say goodbye to the grout joints

Take **Smart Jointer** and fill the grout joints in between the tiles with **one layer**. Use a spatula or trowel.

Go for a jog, sleep, or do that chore you've been putting off while you wait for it to **dry for 24 hours**.

Then, sand the surface with **40-grit sandpaper***. You'll see the sandpaper grain on the velcro. Just attach it to the sanding glove and start sanding, sanding, and sanding.

*For surfaces with mosaic tile, apply 1Kg of Smart Jointer per m². If you've purchased our toolkit, you'll find the glove there.)

Unity is strength

It's time to prepare the surface to make sure the microcement adheres properly. And for that, we have **Smart Primer Plus**.

Use the spatula to mix the product by hand.

Take the roller and the handle, attach them, and apply **one layer of Smart Primer Plus** (pour the product into a tray for added convenience).

Wait for it to dry for 30 minutes, and clean the roller with water immediately after use to prolong its lifespan.


IMAGINE IT. CREATE IT. ENJOY IT.

And voila! You've just renovated that nook in your home easily in just a few days.

Now, enjoy it, make the most of it, and if you feel like it, unveil your work to the world :)

At Smartcret, we can't wait to see it.

Icon guide

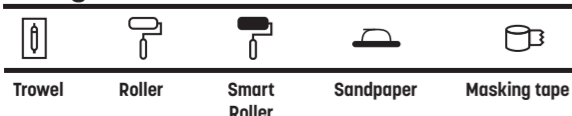

Trowel Roller Smart Roller Sandpaper Masking tape